

MIDIImplant
micro MIDI-2-CV device
version 3.0

USER MANUAL

Roman Sowa 2011
www.midimplant.com

1. Overview

Thank you for choosing *MIDIplant* as your new MIDI2CV converter. This short manual will guide you through installation, and available settings.

The board can be mounted inside any electronic instrument thanks to its small size. No mounting holes are provided. The strength of connecting wires is enough to secure it in place, as it weighs barely 2 grams. If flexible wires were used, you may add a bit of 2-sided adhesive tape to make sure it does not get loose.

MIDIplant has 2 groups of analog outputs, suitable to control analog synths with **V/oct or Hz/V** scaling. MIDIplant comes factory set to 1V/oct scale. CV1 responds to MIDI keyboard on channel 1 and "C" lowest key. CV2 is velocity output. Each CV can be reassigned to different type of MIDI event, not only keyboard notes - this is described in chapter 5.

The board requires only single power supply, and all settings are done with use of one SPST button - it's not part of the delivery, any normally open switch will work. More settings are accessible via MIDI System-Exclusive commands.

MIDIplant board described here is a product of:
"MIDI-hardware" Roman Sowa, ul. Azotowa 15B, 41-503 Chorzów, Poland
phone +48 532 425 835, email info@midimplant.com
© 2011, Roman Sowa
made in Poland, EU

2. Layout

Picture below shows how to locate the soldering pads in MIDImplant, and depicts their role.

Counting from left to right they are:

- MIDI input (1-2)
- power supply 6-15V (3)
- power supply ground and reference point for CV outputs (4)
- CV outputs (5-6)
- MIDI repeater output (7)
- setup (EDIT) button input (8)
- Gate outputs (9-10)



The EDIT button should be connected between the pad indicated in the picture, and ground. You don't need to connect it at all if SysEx will be used or if default setting is OK: channel 1, starting note C (MIDI #36), 1V/oct, velocity on CV2.

MIDI IN signal from DIN socket pins 4 and 5 should be connected to pads 1 and 2 of MIDImplant. Polarity does not matter, it will work either way. Middle pin of DIN socket, number "2", must not be connected anywhere, it must be left open to comply with MIDI specification. There is a tiny LED on board, that indicates incoming MIDI signal. It blinks whenever MIDI comes IN. If MIDI is decoded to be within selected ranges or parameters configured for CV1 or CV2, the blink is stronger.

3. Power supply

First connect the ground input, as shown in layout diagram. The ground pad should be connected with reasonably thick wire to star-ground point, usually located at the power supply. The quality of ground connection directly affects the quality of generated Control Voltage. It's the reference point of CV outs and if there is any noise or voltage offset at your selected ground source, it will be directly transformed to errors in pitch. The ground can also be taken from the reference point of your VCO.

MIDIImplant is designed to work with typical supply voltages present in any electronic instrument. It requires only one positive supply line, and voltage range from +6V up to +15V. Current drawn is about 2mA. It can be taken from any place inside the synth, as long as it does not exceed 15V. Power input must be DC. **Connecting AC power, or reversing the power leads will immediately damage the board.**

4. CV/gate outputs

MIDIImplant has 2 sets of outputs. CV outputs have impedance of 100 ohms and **should be connected to a resistance of 100k** to achieve calibrated precision in 1V/oct setting.

MIDIImplant is calibrated at 100k load. It is possible to use it with other loads, but it should be greater than 10k, otherwise it may be impossible to achieve full range of 5V and maintain precision. Usually CV inputs have 100k impedance, so it's perfectly OK.

Gate outputs use high-side transistor with 1k output resistor. Gate signal has the amplitude equal to power supply voltage (6..15V).

4.1. CV outputs

Each CV output can be configured to respond to one MIDI event. Both outputs are independent to some extent. The only case when they work in conjunction is CV1 configured as MIDI notes. CV2 then becomes Velocity output for the notes played by CV1. It is possible then to change CV2 to something else, but CV2 always becomes velocity right after programming CV1 as MIDI notes.

All available MIDI events represented in Control Voltage are listed below:

- Note on/off
- Note velocity - possible only in CV2
- Pitch Bend
- Continuous Controller
- Program Change
- Channel After Touch
- Polyphonic After Touch

Control Voltage varies from 0V up to 5V. It makes 61-note range for 1V/oct scale. If CV is configured as MIDI event different than notes, 0V represents lowest MIDI value, and 5V is output when highest MIDI value is received.

All controllers are converted to voltage as one of 128 levels, except Pitch Bend, working with full 14-bit resolution (16384 steps). Neutral position of Pitch Bender gives 2.5V at the output. Note on/off can output 61 levels of voltage at most.

For note on/off, CV scale can be adjusted in a wide range, from 0.45V/oct to over 2V/oct if using settings button, and much wider via SysEx. If the scale is higher than 1V/oct there is, of course, no room for 61 keys in 5V range, so it is limited to lower number of keys. Every note higher than this limit gives 5V at CV output.

When configured in Hz/V scale, the voltage always reaches 5V at the top note but may start at 5 different levels, depending on number of octaves chosen. This is described in chapter about tuning (5.3-5.4).

4.2. Gate outputs

Each Gate output associated with CV output generates voltage indicating the duration of MIDI note. When MIDIImplant is configured to respond to MIDI notes, gate output remains at 0V until any note is played. It then goes up to the supply voltage level, and stays there until all notes are released. It is typical V-trigger mode. It is possible to reverse the Gate signal individually for each output, so note on is 0V, and note off is at power supply level.

If CV is configured to anything else than notes, associated Gate stays at off state.

4.3. MIDI repeater output

This output can be used to add MIDI THRU to your MIDI2CV device. The signal available here is regenerated and MIDIImplants can be chained using this option without limits. This is not actual MIDI THRU, because it introduces slight delay, and chaining dozens of MIDIImplants will lead to noticeable delay. This also cannot be connected directly to DIN socket. To comply with MIDI standard, MIDI repeater output must be connected via 220 ohm resistor to connector "5" of THRU DIN socket, while contact "4" of this socket must be connected via another 220 ohms resistor to +5V source. MIDIImplant cannot provide +5V for that purpose, so the voltage must be taken from elsewhere. Connector "2" of DIN socket should be connected to ground.

5. User settings with EDIT button

After successful installation, you can set up the MIDI events associated with each CV output. To do so, your synth must be powered on, and have EDIT button connected (see the layout). There are only 4 parameters to set:

1. channel and MIDI event for CV1/gate1
2. channel and MIDI event for CV2/gate2
3. Keyboard scale select (common for both CV)
4. V/oct fine tuning (common for both CV)

To select which parameter you want to edit, press the setup button appropriate number of times. Press once for setting CV1, twice for CV2, 3 times for scale select or 4 times to fine tune the scale. There's no time limit for pressing the EDIT button several times. But don't push it too fast, because it may be treated as contact bounce, and ignored.

All user settings are memorized in nonvolatile memory, taking power off does not reset anything to defaults, the settings are kept as they were last entered.

5.1. Channel and event of CV1 and Gate1

1. press EDIT button **once**
2. generate MIDI event from your device connected to MIDImplant

If it's going to be e.g. Pitch Bend, CV1 will be set as such with first movement of your Pitch Bend

wheel. It will then follow your Pitch Bend movement by outputting voltage proportional to what is happening with the Pitch Bender. Same applies to all other controls except notes

If it's going to be note on/off, you must play **the lowest note** of your keyboard to be associated with CV1. With next note played, CV1 will output voltage according to MIDI note played, and Gate1 will go high whenever there's any key pressed. At the same time CV2 will represent the value of note Velocity

5.2. Channel and event of CV2 and Gate 2

1. press EDIT button **twice**
2. generate MIDI event from your device connected to MIDIImplant

If it's going to be e.g. Modulation, CV2 will be set as such with first movement of your Modulation wheel. It will then follow your Modulation movement by outputting voltage proportional to what is happening with the wheel. Same applies to all other controls except notes

If it's going to be note on/off, you must play **the lowest note** of your keyboard to be associated with CV2. With next note played, CV2 will output voltage according to MIDI note played, and Gate2 will go high whenever there's any note pressed.

You should never assign the same keyboard to both channels, CV1 and CV2. Only CV1 will work then. You can have two independent note CV outputs only if each of them is played in different MIDI channel. The only way to have 2 note CV outputs is to setup CV1 first, and then CV2. Setting CV1 as note on/off will always change CV2 to velocity output, regardless of how it was programmed before.

5.3. Keyboard scale select

MIDIImplant comes factory calibrated to 1V/oct scale, but you can change it anytime to another V/oct ratio, or Hz/Volt response. If selected by "EDIT button", the scale is the same for both channels - CV1, and CV2, so if you change it for the keyboard associated with CV1, remember that CV2 will also work in altered scale. To have V/oct in one CV and Hz/V in the other one, or different V/oct ratios in 2 channels, you must use SysEx configuration (see chapter 6).

The scale setup applies only to MIDI note on/off events. All other controls always use full 0-5V range for MIDI parameter value. No scaling is available for those.

To change the scale of your note CV, you must have the keyboard already associated to CV1. If it's done, do the following:

1. press the EDIT button **three times**
2. press a key on your MIDI keyboard to select the scale. 5 lowest notes are reserved for **Hz/V**, while notes above set **V/oct** scale in the following way, assuming you use 5 octave keyboard with lowest note "C":
 - "C" sets the scale to Hz/V and 1 octave range (CV range 2.5 - 5V)
 - "C#" sets the scale to Hz/V and 2 octaves range (CV range 1.25 - 5V)
 - "D" sets the scale to Hz/V and 3 octaves range (CV range 0.6V - 5V)
 - "D#" sets the scale to Hz/V and 4 octaves range (CV range 0.3V - 5V)
 - "E" sets the scale to Hz/V and 5 octaves range (CV range 0.16 - 5V)
 - "F" sets the scale to factory **calibrated 1V/oct**, with lowest pitch errors
 - "F#" sets the scale to about 0.45V/oct

- top "C" sets 2.05V/oct Any key in between lowest "F#" and top "C" may be selected for different scales. Middle "C" (25th key) sets almost 1V/oct
3. if V/oct was selected, CV will output the scale value and it can be measured with precision multimeter. If, for example you've selected 1V/oct by pressing 25th key, it will read 1V. For Hz/V scale, CV is set according to played note.

Every note played after this procedure will be converted according to newly selected scale. This procedure can be repeated many times, until you find proper scale. You can fine tune V/oct scale later, but coarse setting done here should rather be slightly lower than needed scale, because fine tuning can only increase the scale a bit. It's not (+/-)fine tuning.

5.4. V/oct fine tune

After you've selected the scale as described before, you may want to fine adjust it to match your expectations within single mV per octave. Fine tuning is only available for V/oct scales. Hz/V scales are factory calibrated to maximum 2 cents of tuning error over entire keyboard range and cannot be adjusted by the user.

To enter fine tuning mode, do the following:

1. press the EDIT button **four times**
2. select fine adjustments with MIDI keyboard. Lowest note means no adjustment - the scale remains as set in V/oct scale select procedure. 61th key means increasing the scale of about 2 semitones per whole 5 octaves assuming you're working on 1V/oct scale. Every key in between sets the fine adjustment proportional to played key position.

3. at this time CV will output new scale value to be measured with precision multimeter. This is the value for only 1 octave, and to achieve full accuracy, you may then want to measure the voltage after playing a key that is 3 or 4 octaves higher than the lowest one.

6. User settings via System-Exclusive

All settings described in chapter 5 are also accessible via MIDI System-Exclusive messages. But Sys-Ex is the only way to set them separately for each CV output. The command's structure is as follows:

SysEx header (F0), manufacturer ID (00 20 7A), device ID (01), CV output ID (01-02), command (01-04), associated parameters and Sys-Ex footer (F7). This is described in details here. All numbers are represented in **hexadecimal** format. You may use any kind of Sys-Ex editor to send those commands to MIDImplant.

6.1. Channel and event

F0 00 20 7A 01 <CV> 01 <channel> <event> <param> F7

where:

<CV> is CV output indicator: 01 or 02

<channel> is MIDI channel in range 1-16 (01-10 in hex)

<event> with related *<param>* is MIDI event from the following list:

<i>event</i>	MIDI event type	meaning of <i>param</i>
01	Note on/off	starting note
02	Polyphonic Aftertouch	ignored
03	Continuous Controller	CC number (00-7F)
04	Program Change	ignored
05	Channel Aftertouch	ignored
06	Pitch Bend	ignored

If CV1 is assigned as note on/off, CV2 will be automatically set to note velocity. To change this, follow any procedure for CV2 assignment after CV1 is done.

6.2. V/oct scale tune

F0 00 20 7A 01 <CV> 02 <MSB> <LSB> F7

where:

<CV> is CV output indicator: 01 or 02

<MSB> is most significant byte of tuning scale. Possible values 00-7F

<LSB> is least significant byte of tuning scale. Possible values 00-7F

Both parameters combined form a 14-bit value of tuning ratio. Tuning is adjusted in steps of about 1mV per octave. Typical 1V/oct ratio is achieved when <MSB> = 08, and <LSB> = 44 (hex), according to the formula:

TUNE = 1000 * [V/oct] / 0.917
MSB = integer of TUNE / 128
LSB = TUNE - MSB * 128

6.3. V/oct and Hz/V scale select

F0 00 20 7A 01 <CV> 03 <select> F7

where:

<CV> is CV output indicator: 01 or 02

<select> takes one of 7 possible values:

00: set CV output to variable **V/oct** scale tuned by parameter described in 6.2.

01 - 05: set CV output to **Hz/V** scale and define how many octaves are accessible.

06: set CV output to fixed, calibrated 1V/oct scale

In Hz/V mode *<select>*=01 means that only one octave is possible and lowest voltage is 2.5V.

<select> = 05 means 5 octave range and starting note gives lowest voltage of 0.16V. Although MIDImplant is factory calibrated to match Hz/V response within +/-2 cents over full 5-octave range, it may be sometimes desirable to limit the number of octaves and start with higher voltage to achieve best accuracy at lowest notes.

When *<select>* = 6, the CV turns to factory calibrated 1V/oct scale (at 100k load) with lowest possible tuning errors. Other V/oct scales tuned as described in chapters 5.3, 5.4 and 6.3 exhibit slightly bigger errors, but still within +/-2 cents over 5-octaves span.

6.4. Gate polarity

F0 00 20 7A 01 <CV> 04 <polarity> F7

where:

<CV> is CV output indicator: 01 or 02

<polarity> takes one of 2 possible values:

00: Gate during note-on is at power supply voltage, when all notes are off - at 0V

01: Gate during note on is at 0V, when all notes are off - at power supply voltage

6.5. Reset to factory defaults

Send the following System-Exclusive sequences, with short delays separately, to go back to default settings:

F0 00 20 7A 01 01 03 06 F7 – 1V/oct calibrated scale for CV1

F0 00 20 7A 01 02 03 06 F7 – 1V/oct calibrated scale for CV2

F0 00 20 7A 01 01 04 00 F7 – normal Gate1 polarity

F0 00 20 7A 01 02 04 00 F7 – normal Gate2 polarity

F0 00 20 7A 01 01 01 01 01 24 F7 – notes in CV1, velocity in CV2

You should **never, in any case, send all Sys-Ex sequences immediately** one by one. It needs at least 3ms delay between those 2 commands, so if your SysEx editor does not allow for introduction of short delays, send those 2 sequences separately.